



HONDA GEAR CHART

Honda Gear Chart																	
QuarterMidgetsUSA.com					<-- Engine Gear -->								QuarterMidgetsUSA.com				
	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42
23	5.31	5.11	4.93	4.76	4.60	4.45	4.31	4.18	4.06	3.94	3.83	3.73	3.63	3.54	3.45	3.37	3.29
24	5.54	5.33	5.14	4.97	4.80	4.65	4.50	4.36	4.24	4.11	4.00	3.89	3.79	3.69	3.60	3.51	3.43
25	5.77	5.56	5.36	5.17	5.00	4.84	4.69	4.55	4.41	4.29	4.17	4.05	3.95	3.85	3.75	3.66	3.57
26	6.00	5.78	5.57	5.38	5.20	5.03	4.88	4.73	4.59	4.46	4.33	4.22	4.11	4.00	3.90	3.80	3.71
27	6.23	6.00	5.79	5.59	5.40	5.23	5.06	4.91	4.76	4.63	4.50	4.38	4.26	4.15	4.05	3.95	3.86
28	6.46	6.22	6.00	5.79	5.60	5.42	5.25	5.09	4.94	4.80	4.67	4.54	4.42	4.31	4.20	4.10	4.00
29	6.69	6.44	6.21	6.00	5.80	5.61	5.44	5.27	5.12	4.97	4.83	4.70	4.58	4.46	4.35	4.24	4.14
30	6.92	6.67	6.43	6.21	6.00	5.81	5.63	5.45	5.29	5.14	5.00	4.86	4.74	4.62	4.50	4.39	4.29
31	7.15	6.89	6.64	6.41	6.20	6.00	5.81	5.64	5.47	5.31	5.17	5.03	4.89	4.77	4.65	4.54	4.43
32	7.38	7.11	6.86	6.62	6.40	6.19	6.00	5.82	5.65	5.49	5.33	5.19	5.05	4.92	4.80	4.68	4.57
33	7.62	7.33	7.07	6.83	6.60	6.39	6.19	6.00	5.82	5.66	5.50	5.35	5.21	5.08	4.95	4.83	4.71
34	7.85	7.56	7.29	7.03	6.80	6.58	6.38	6.18	6.00	5.83	5.67	5.51	5.37	5.23	5.10	4.98	4.86
35	8.08	7.78	7.50	7.24	7.00	6.77	6.56	6.36	6.18	6.00	5.83	5.68	5.53	5.38	5.25	5.12	5.00